


THANK YOU FOR CHOOSING ROBUSTEL

## How to set up a Robustel device?

To initiate the setup of your device, please refer to the steps below.


### 1 Connect the hardware

Power on the device and then connect it to a PC via an Ethernet cable.

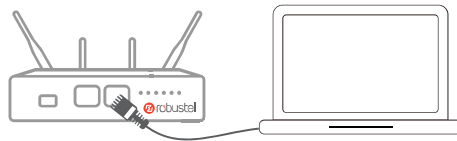


### 2 Obtain the IP address

Enable the DHCP client mode of PC, and then check the network connection status to confirm the PC has obtained the IP address from DHCP server .

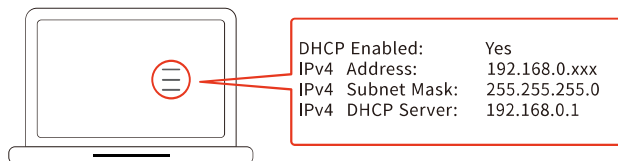

### 3 Access the Web page

Input 192.168.0.1 in your browser to enter the device login page, and then use the default username and password (shown in the device label) to login the device configuration page.

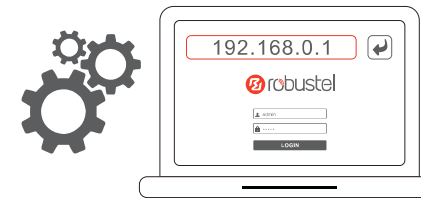

*Note: The Wi-Fi feature is disabled by default.*

#### Related download link

Find additional product documents or tools at <https://www.robustel.com/documentation/>



#### Technical support contact

Tel: +86-20-82321505

Email: [support@robustel.com](mailto:support@robustel.com)

#### Simplified EU & UK Declaration of Conformity

We, Guangzhou Robustel Co., Ltd. are located at 501, Building #2, 63 Yongan Road, Huangpu District, Guangzhou, China, declare that this radio equipment complies with EU Directives and UK Regulations. The full text of the EU & UK DoC is available at the following Internet address:

[www.robustel.com/certifications](http://www.robustel.com/certifications)